


P2 - non skive

For Hose Type:

2 SN - DIN - EN 853 +
SAE 100 R2AT - DN 06 up
to DN 25

3 TE - DIN EN 854 + 3 TB

For use with standard inserts
pp. 2.14–2.60

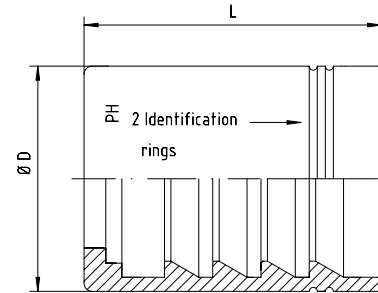

Hose DN	Bore in.	Notes		Part code	
		D	L		
05	3/16"	21.0	23.0	only for 2 SN	P2-DN 05
06	1/4"	22.0	34.5		P2-DN 06
08	5/16"	24.0	34.5		P2-DN 08
10	3/8"	26.0	35.0		P2-DN 10
12	1/2"	30.0	37.0		P2-DN 12
16	5/8"	33.0	40.0		P2-DN 16
19	3/4"	38.0	45.0		P2-DN 19
25	1"	46.0	50.0		P2-DN 25
31	1 1/4"	55.0	70.0	not for 2 SN	P2-DN 31
38	1 1/2"	60.0	70.0	not for 2 SN	P2-DN 38
51	2"	76.0	80.0	not for 2 SN	P2-DN 51
60	2 3/8"	82.5	72.0	not for 2 SN	P2-DN 60
80		108.0	90.0	not for 2 SN	P2-DN 80

Please Note

- for R2AT / 2SN hose, you must use the P2 ferrule up to and including 1" hose.
- For 1 1/4" and above you must use the P8 ferrule (following page, 2.12)